



**spool3d**  
filament refill  
instructions


- 1** Remove refill spool from packaging.  
**DO NOT REMOVE PLASTIC BANDS!**

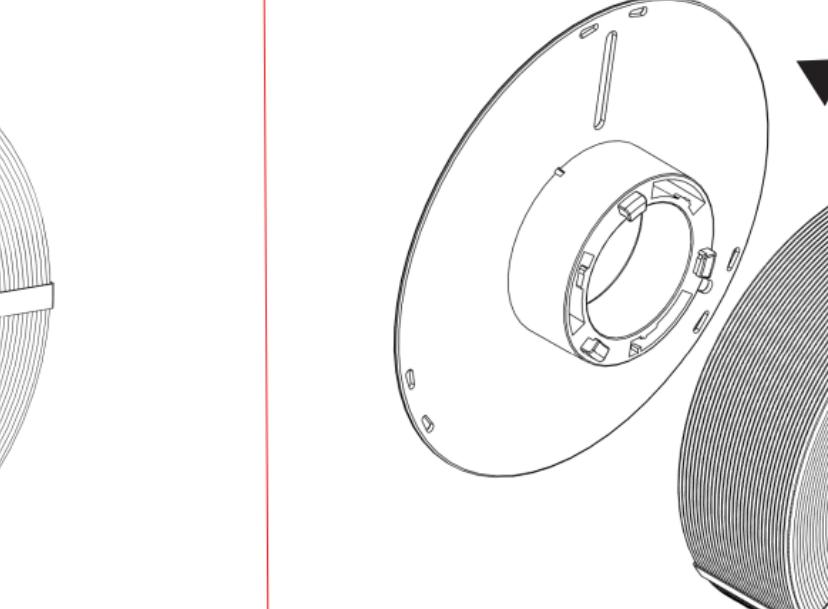


- 2** Twist open the 2 halves of the reusable spool  
and place the refill on one half.

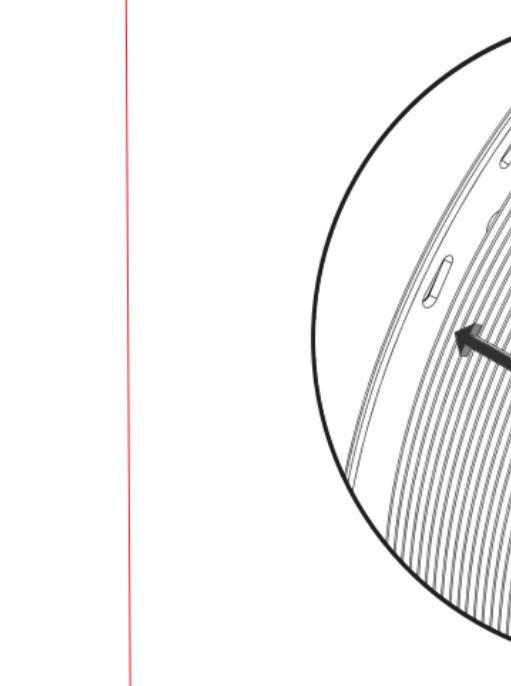

- 3** Slide the other half onto the refill, aligning  
the holes on the rims.

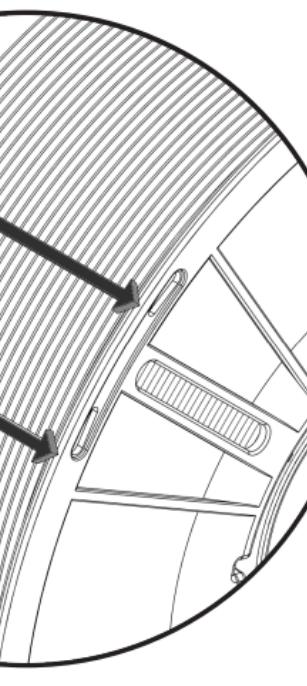

- 4** Squeeze the sides together while turning as shown. Sides  
will lock in place and not come apart. A correct lock is  
completed when there is no space between the 2 halves and  
the small bumps on the inside of the spool rims line up.

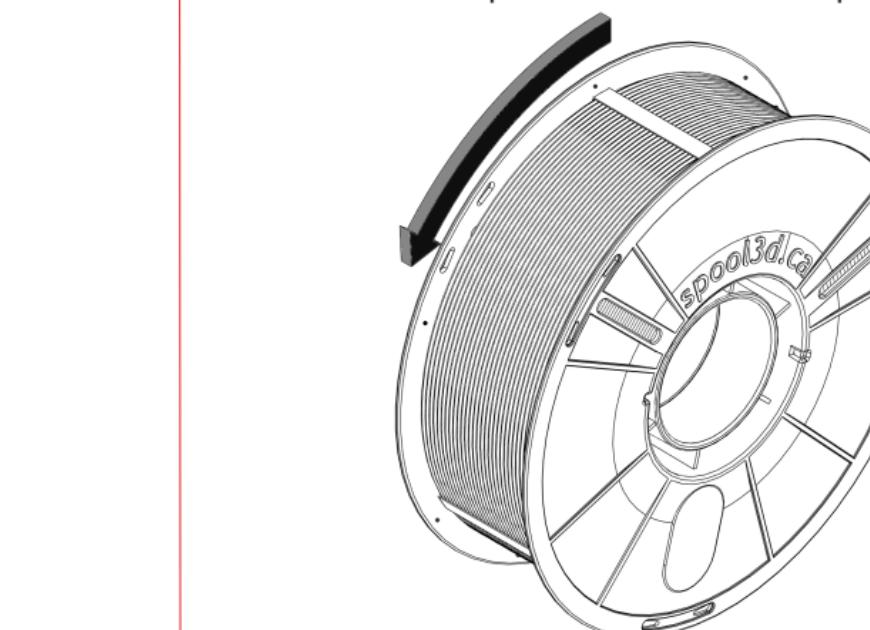





[spool3d.ca/refill](http://spool3d.ca/refill)




- 1 Retirez la bobine de recharge de son emballage.  
NE RETIREZ PAS LES BANDES PLASTIQUES !

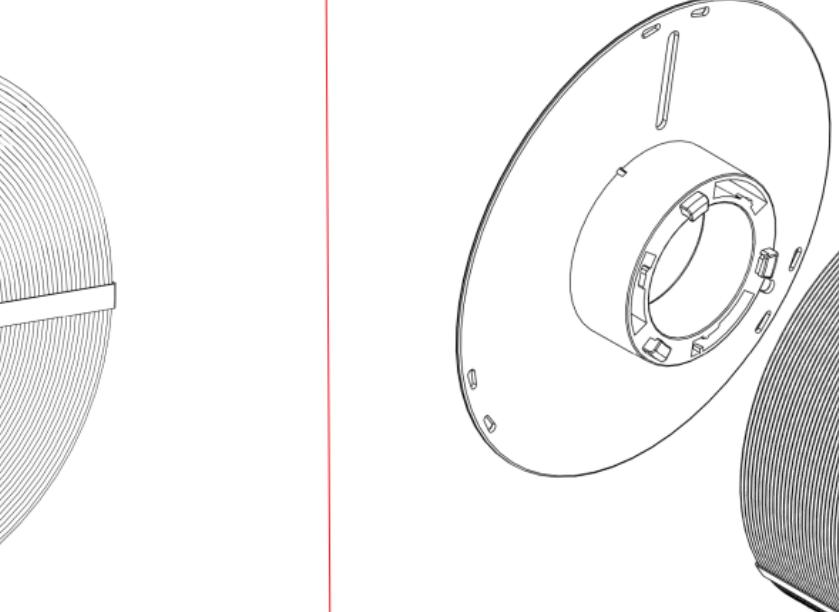


- 2 Ouvrez les 2 moitiés de la bobine réutilisable et placez la recharge sur l'une des moitiés.

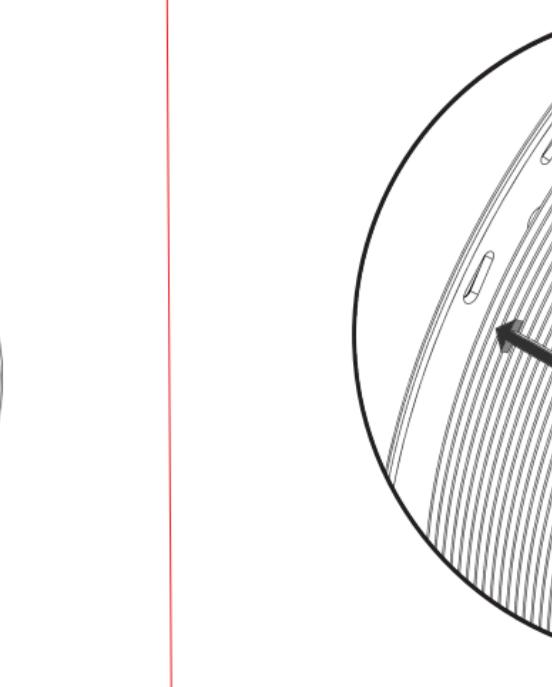

- 3 Faites glisser l'autre moitié sur la recharge, en alignant les trous sur les bords.

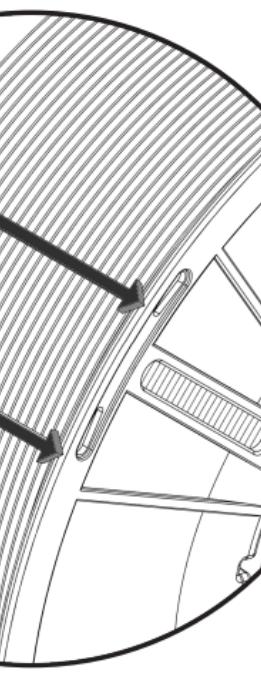

- 4 Pressez les côtés l'un contre l'autre tout en tournant comme indiqué. Les côtés se verrouillent et ne se séparent plus. Un verrouillage correct est obtenu lorsqu'il n'y a plus d'espace entre les deux moitiés et que les petites bosses à l'intérieur des bords de la bobine sont alignées.

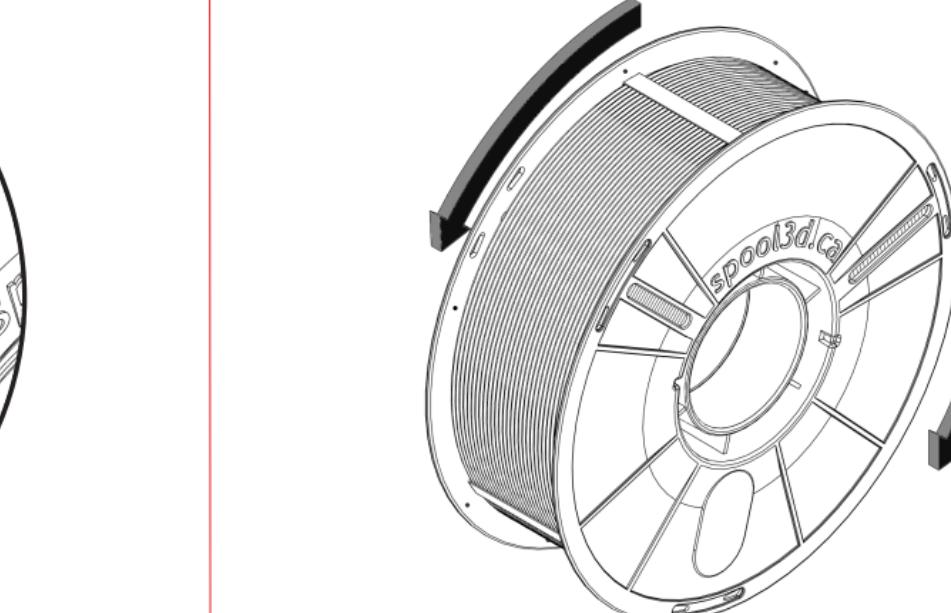

Coupez et enlevez les bandes plastiques. Collez l'autocollant fourni.